



FIERY[®] JOBMMASTER-IMPOSE

Makeready and imposition solutions



Speed production and reduce waste with Fiery makeready solutions

Fiery® JobMaster™-Impose is a PDF-based software solution for professional print job makeready and layout imposition. Use it to streamline and automate labor-intensive prepress tasks to save time and money preparing jobs for print.

Intuitive

- Get robust document imposition and composition tools in one visual interface
- Preview jobs exactly as they will print, eliminating waste and rework

Flexible


- Scales from a single-operator to a multiple-operator environment
- Keeps you up to date with innovate feature updates*
- Uses one makeready solution for all your Fiery Driven™ printer brands
- Allows non-destructive edits throughout job setup to fulfill change requests without having to start over

Integrated

- Offers tight integration with Fiery Command WorkStation® and the rest of the Fiery Workflow Suite to increase production efficiency
- Seamlessly integrates with Adobe® Acrobat® Pro** to handle late-stage edits

Convenient

- Provides a standalone solution that doesn't require additional hardware investment
- Runs on a PC or Mac® client, or locally on the Fiery server

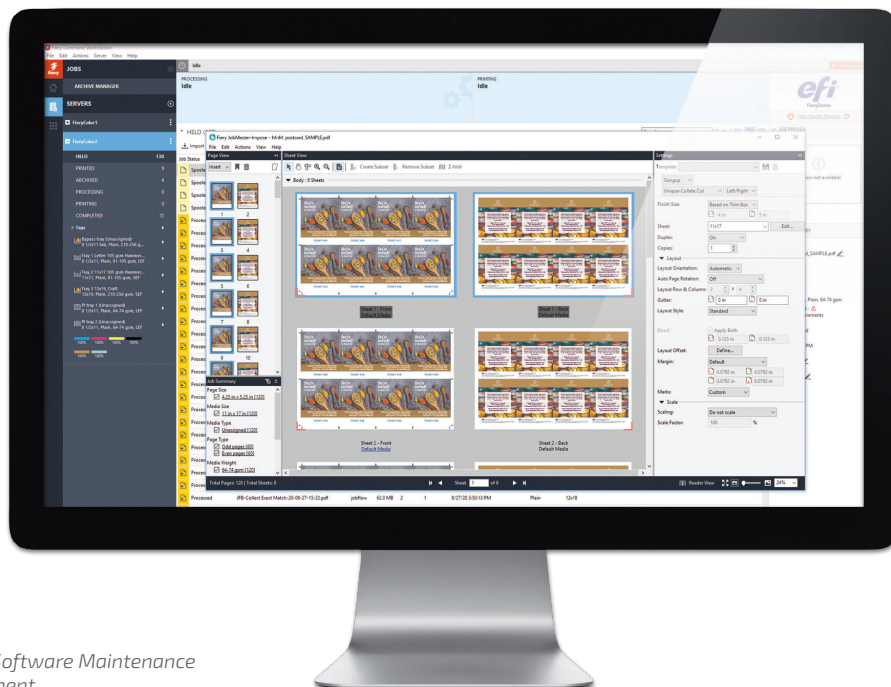

* Requires a current Software Maintenance and Support Agreement

** Available as a separate purchase



Automate imposition tasks

Fiery Impose is an intuitive imposition solution that streamlines and automates the page layout process.

- Automate imposition workflow with customized templates
- Optimize the printable area for chosen media
- Honor trim and bleed values in PDF files for accurate trim mark placement
- Use versatile gangup styles for efficient finishing of printed products
- Produce saddle-stitched, nested saddle, or perfect-bound booklets — optimized for inline finishing devices
- Produce personalized jobs with VDP imposition
- Automate slitter/cutter/creaser offline finishing with out-of-the-box templates including cut and registration marks for Ausjotech, Duplo, Graphic Whizard, Horizon, MBM, Morgana, Plockmatic Group, Standard, and Uchida slitter/cutter/creaser finishers
- Create custom imposition layouts with cut, perforation, and fold finishing settings for high-value jobs that can be readily processed by Duplo nearline slitter/cutter/creaser finishers for fast production turnaround



Save time on complex document preparation

Fiery JobMaster helps operators to be more productive when preparing a wide variety of higher-margin jobs.

- Simplify job merge with drag-and-drop functionality and visual feedback
- Mask unwanted content
- Apply page numbering, unique ticketing, or add text and image stamping to selected pages
- Scan, import, and clean up hard-copy pages
- Save on click charges by specifying any page to print in black and white
- Use page ranges to apply media and inline finishing attributes on a chapter basis
- Produce bleed-edge tabs or insert multi-bank tabs
- Design tabs with images, color backgrounds, and text
- Use PDF bookmarks to automate tabs
- Quickly create multi-part forms





Make more of makeready



Try Fiery JobMaster-Impose today

See the value for yourself with a free trial by visiting resources.fiery.com/FieryImpose and resources.fiery.com/FieryJobMaster.

Get free online training courses

You can quickly become proficient in imposition and makeready, and start taking advantage of the powerful tools in Fiery JobMaster-Impose, with the interactive eLearning courses included with the product. Visit our on-demand, 24/7 learning platform at [Learning.fiery.com](https://learning.fiery.com).




Add on tools to apply last-minute edits

Handle last-minute edits without leaving the Fiery JobMaster-Impose interface with Adobe Acrobat Pro*.

Calculate your savings with Fiery Impose

Compare your imposition process to an InfoTrends survey of over 200 print service providers. See what your payback time might be if you streamline and automate imposition. Visit solutions.fiery.com/impose-roi.

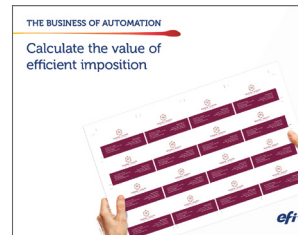

More information

To get more information, start a free trial, or to purchase the products, visit resources.fiery.com/FieryImpose and resources.fiery.com/FieryJobMaster or contact your Fiery dealer.

* Available as a separate purchase



For more information, please visit www.fiery.com

Nothing herein should be construed as a warranty in addition to the express warranty statement provided with Fiery, LLC products and services.

ColorGuard, ColorRight, Command WorkStation, ColorWise, Fiery, the Fiery logo, Fiery Compose, Fiery Driven, the Fiery Driven logo, Fiery Edge, Fiery Essential, Fiery HyperRIP, Fiery Impose, Fiery Impress, Fiery ImageViewer, Fiery Intensify, Fiery JobExpert, Fiery JobFlow, Fiery JobMaster, Fiery Prep-it, Fiery Prints, the Fiery Prints logo, Fiery TrueBrand, FreeForm, MicroPress, IQ, PrintMe, RIPChips, RIP-While-Print, Spot-On, Spot Pro, and WebTools are trademarks or registered trademarks of Fiery, LLC and/or its wholly owned subsidiaries in the U.S. and/or certain other countries. All other terms and product names may be trademarks or registered trademarks of their respective owners and are hereby acknowledged.

© 2023 FIERY, LLC. ALL RIGHTS RESERVED.

FTL_049.09.23_US