




KONICA MINOLTA

TECHNOLOGY

bizhub® SECURE PLATINUM

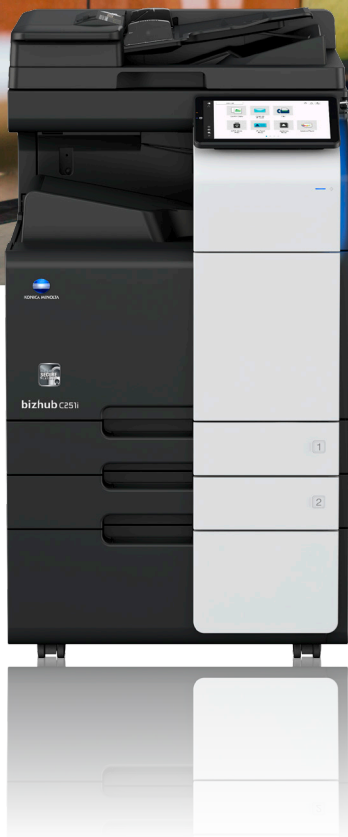

Of all the resources in today's business and professional world, your data and its confidentiality are critical concerns.

To satisfy these requirements, Konica Minolta provides the industry's most comprehensive suite of standard privacy and security solutions. We provide all the features you need to protect your information together with secure printing, scanning, copying and faxing functions. Our MFPs feature the lock-down protection of bizhub® SECURE Platinum to help you ensure confidentiality and enhance your organization's compliance strategy.

bizhub® SECURE PLATINUM

Advanced network and storage media security functionality to meet the challenges of safeguarding your valuable data.

SOLUTIONS

Is your data encrypted or protected by complex passwords? Does access to your printer/copier require user authentication? Are print/copy functions tracked, so you know who, when and where copies were made? Is your email traffic logged and preserved? Are printouts and faxes containing confidential information protected from unauthorized personnel? Have you extended your network security protocols to your multifunction devices? To meet your security needs, our bizhub SECURE Platinum solution and IT Services combine to enhance your security, speed your work and help control your costs. We provide assurance in today's ever-changing workplace environment to help you navigate these questions. And succeed.

PROTECT AND DEFEND

Lock-down protection for your MFP means safeguarding information and defending your organization from security breaches. Konica Minolta offers your organization the enhanced confidence and compliance of bizhub SECURE Platinum: powerful password and advanced network and data security measures to protect your valuable data. These enhanced security features will be enabled by your Konica Minolta field engineer to ensure that your data is more than secure – it's bizhub SECURE. It's just another way that Konica Minolta gives shape to ideas.



KONICA MINOLTA'S BIZHUB SECURE PLATINUM¹ PROVIDES A ROBUST SET OF FEATURES

- Create a 20-digit secure alphanumeric password to lock down your bizhub storage media
- Encrypt the entire contents of your bizhub storage media for remarkable data security
- Time your bizhub MFP to auto-delete any material located in personal or public User Boxes, System User Boxes, Documents and Folders
- Disable Non-secured and unwanted Services, Protocols and Ports at the MFP
- Enable TLS v1.2/1.3 on the MFP (self-signed certificate)
- Enable Network User Authentication
- Enable MFP Audit Logs

bizhub SECURE Platinum Compatibility Table

	Monochrome Small microSD-based MFPs ³	Color Small microSD-based MFPs ³	Monochrome SSD-based MFPs ⁴	Color SSD-based MFPs ⁴
Change administrator password ¹	✓	✓	✓	✓
Enable storage media encryption	✓	✓	✓	✓
Timed automatic overwrite of a file in an electronic folder (box)			✓	✓
Automatic overwrite of temporary Image data ²				✓
SSD lock password			✓	✓
Disable unprotected services, protocols and ports	✓	✓	✓	✓
Enable SSL (Self-Signed Certificate)	✓	✓	✓	✓
Enable MFP auto logs	✓	✓	✓	✓
Enable administrator account auto logoff	✓	✓	✓	✓
Enable user account auto logoff	✓	✓	✓	✓
Enable user authentication	✓	✓	✓	✓

¹ bizhub SECURE may be disabled using the customer's unique Administrative Password. It is recommended that customers not disclose the unique Administrative Password and keep the Administrative Password in a safe place. Customers shall indemnify and hold Konica Minolta harmless of any claims, damages or costs relating to loss of data or disclosure of data due to intentional acts or omissions of others, end-user error or release of Administrative Password.

² Applies to "non i-Series" Large MFPs with a hard drive. Automatic Overwrite of Temporary Image Data not required on i-Series MFPs due to SSD (Solid-State Drive) technology

³ microSD (micro Secure Digital) an internal flash memory card used for storing information.

⁴ SSD (Solid-State Drive) is an advanced type of storage device.

For complete information on Konica Minolta products and solutions, please visit: CountOnKonicaMinolta.com

© 2026 KONICA MINOLTA BUSINESS SOLUTIONS U.S.A., INC. All rights reserved. Reproduction in whole or in part without written permission is prohibited. KONICA MINOLTA and the KONICA MINOLTA logo are registered trademarks or trademarks of KONICA MINOLTA, INC. All other product and brand names are trademarks or registered trademarks of their respective companies or organizations. All features and functions described here may not be available on some products. Design & specifications are subject to change without notice.



KONICA MINOLTA

KONICA MINOLTA BUSINESS SOLUTIONS U.S.A., INC.
100 Williams Drive, Ramsey, New Jersey 07446

CountOnKonicaMinolta.com



Item #: bizhubSEPCSS
3/26-PD