

FIERY® JOBMASTER™

Makeready software



Advanced,
visual, flexible
makeready



Save time on complex document preparation.

Fiery® JobMaster,™ a key product of the Fiery Workflow Suite, provides advanced PDF-based job preparation functions. Print operators will be more productive when performing makeready tasks with complex documents. Intuitive document assembly includes fully visual tab insertion and design, media assignment, advanced page numbering, finishing, scanning, and powerful late-stage editing features.

With Fiery JobMaster, you'll be able to:

- Produce error-free, higher-margin jobs such as catalogs, manuals, proposals, reports, and books.
- Speed up job preparation using a flexible and integrated solution.
- Reduce waste and save time with interactive and fully visual job previews.

Easy to use

Fiery JobMaster launches from the Fiery Command WorkStation® user interface to provide unsurpassed flexibility and ease of use:

Flexible


JobMaster can run on a PC or Mac® client, or locally on the Fiery server.

Intuitive

Built with the familiar Fiery user interface, operators can be up and running quickly, producing high value jobs.

Easy to deploy

JobMaster is easy to maintain and access since you don't need to install it on a separate server — it runs anywhere Fiery Command WorkStation does.

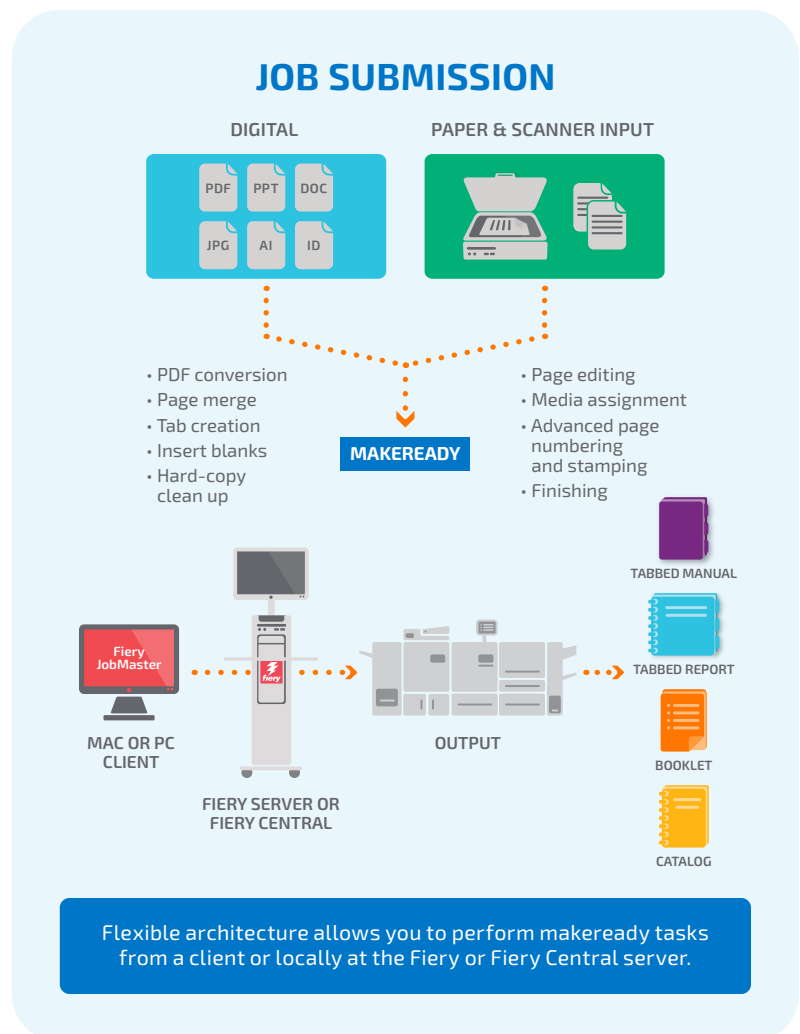



What JobMaster does:

Displays visual preview of all job settings

JobMaster previews jobs in page and sheet views, displaying media attributes at a glance for quick job navigation.

Provides advanced tab creation

The preview changes dynamically as users specify tab ear settings and content that can include images, color background, and text. Users can easily insert multibank or bleed-edge tabs for more complex, higher profit documents. In addition, Auto Tabs feature takes advantage of bookmark links in PDF files to automate the tab creation process.



Integrates and cleans up hard-copy pages

Users can de-skew and de-speckle scanned documents; edit images for brightness, contrast, and sharpness; make pages fit the desired media size for a uniform appearance on every page; and mask out staples, hole-punch marks, or page content.



Converts to grayscale

Easily specify any page or sheet surface to print in black and white and save on click charges while honoring the designer's intent for the printed piece.

Allows editing of selected pages

Operators can redefine crop and trim box sizes and mask unwanted content such as pre-existing page numbers. Edits are non-destructive and can be removed or modified any time before production.

Applies page numbering and stamping

Apply unique numbering sequences for one or multiple page sections using custom text, formats, and macros anywhere on the page. Skip page numbers for inserts and tabs, and store new page-number templates to speed up future jobs.

Provides drag-and-drop page merge and scaling

Merge digital and scanned documents to create a new job. Edit by deleting or moving pages, or inserting blank or duplicate pages. Adjust the scale of individual pages to maintain a consistent and polished appearance when merging files from various sources.

Integrates with Adobe® Acrobat® Pro*

Make last-minute changes to document content without returning the file to customers. Or do last-minute text, spot-color, or image changes in PDF documents.

** Available as a separate purchase*



System requirements

Features and functions vary by the version of Fiery Command WorkStation installed. Ensure you have the latest to take advantage of all the features. Check the system installation requirements at solutions.fiery.com/cws/systemspec.

Support and maintenance

With a support and maintenance agreement, you get the latest updates and upgrades online. You can also access Fiery technical support by phone, email, and on the Fiery JobMaster User Forum.

Add Fiery Impose to maximize profits

By purchasing Fiery Impose along with Fiery JobMaster you can incorporate intuitive document imposition to streamline and automate the job setup process, making document layout and imposition tasks work in a single work space.

Supported printers

For the latest list of supported Fiery Central and Fiery Driven™ engines visit solutions.fiery.com/jobmaster/supported-printers.

Fiery Workflow Suite

Fiery Impose is part of the Fiery Workflow Suite, a comprehensive set of advanced tools that streamline and automate print processes for a new level of productivity from job submission to output.

Get Fiery JobMaster today

To get more information, or to buy Fiery JobMaster, visit fiery.com/jobmaster or contact your Fiery dealer.



For more information, please visit www.fiery.com

Nothing herein should be construed as a warranty in addition to the express warranty statement provided with Fiery, LLC products and services.

ColorGuard, ColorRight, Command WorkStation, ColorWise, Fiery, the Fiery logo, Fiery Compose, Fiery Driven, the Fiery Driven logo, Fiery Edge, Fiery Essential, Fiery HyperRIP, Fiery Impose, Fiery Impress, Fiery ImageViewer, Fiery Intensify, Fiery JobExpert, Fiery JobFlow, Fiery JobMaster, Fiery Prep-it, Fiery Prints, the Fiery Prints logo, Fiery TrueBrand, FreeForm, MicroPress, IQ, PrintMe, RIPChips, RIP-While-Print, Spot-On, Spot Pro, and WebTools are trademarks or registered trademarks of Fiery, LLC and/or its wholly owned subsidiaries in the U.S. and/or certain other countries. All other terms and product names may be trademarks or registered trademarks of their respective owners and are hereby acknowledged.

© 2024 FIERY, LLC. ALL RIGHTS RESERVED.

FTL_010.02.24_US